



4.5 Volt Proto Board Basic Layout

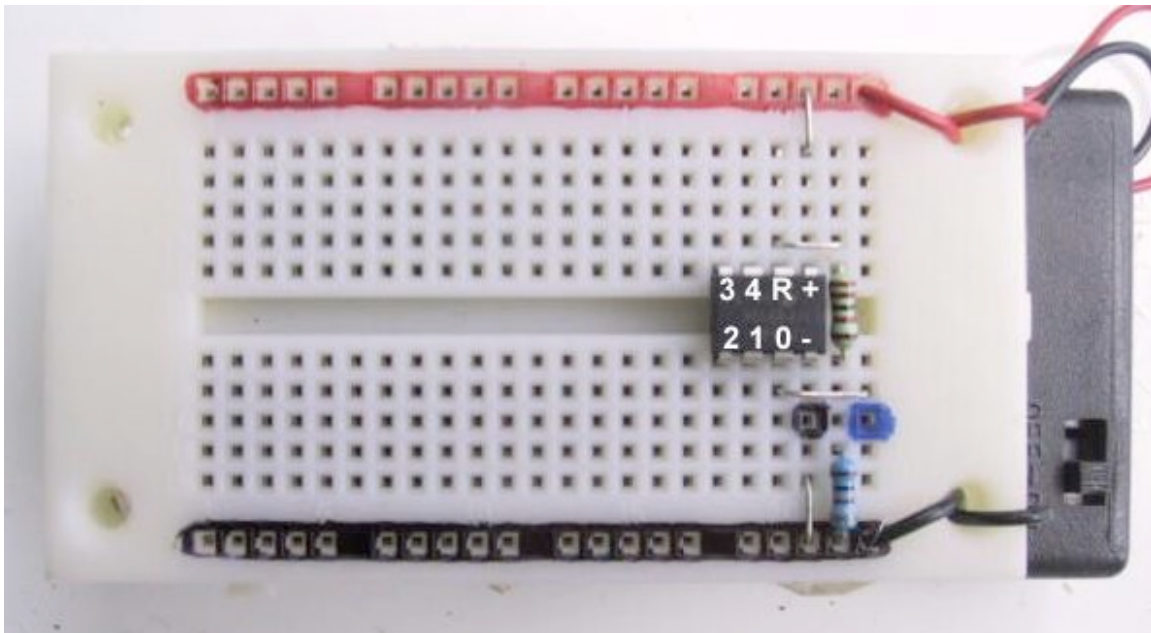

Try Me Out

- If the PICAXE has a demo program running on it try inserting LEDs between any vertical rows of rows leading from pins 0,1,2,or 4 of the PICAXE and the red +ve or black -ve lines
- See how many LED's you can get going !

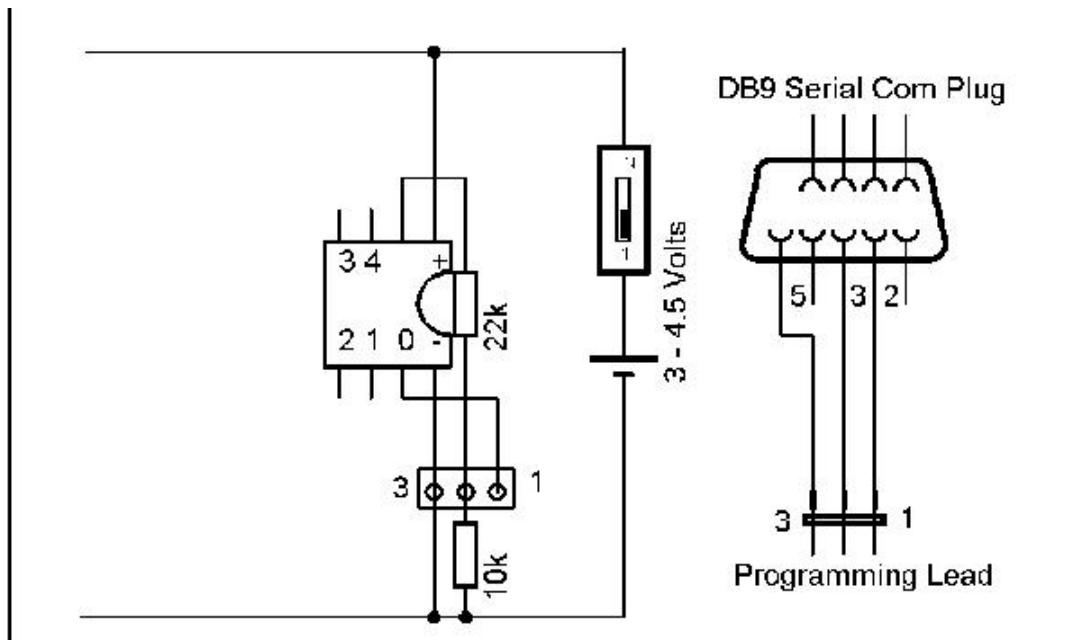

Compare the parts in this circuit with the components on the Proto board and a Kiwi Patch circuit board track layout